

基本事項

録画したものを再生する



USBメモリなどにバックアップする



バックアップ再生方法は2種類あります コピータイプによって再生方法が異なります。 ①EXEコピー②AVIコピーがあります。	
 ▶ 820120123.171600-20120123.171700 2012/01/23 8:34 アブリケーション 63,480 KB ▶ 820120123.171600-20120123.171700 2012/01/23 8:34 HTML Nキュメ 3 KB ■ 820120123.171600-20120123.17170 2012/01/23 8:34 テキスト ドキュ 2 KB ■ 820120123.171600-20120123.17170 2012/01/23 8:33 テキスト ドキュ 0 KB ■ 820120123.171600-20120123.17170 2012/01/23 8:33 テキスト ドキュ 0 KB 	■ C20120123.171620-20120123.171719 2012/01/23 17:16 ビデオ クリップ 11,000 KB ● C20120123.171620-20120123.171719 2012/01/23 6:35 HTML ドキュメ 3 KB □ C20120123.171620-20120123.17171 2012/01/23 6:35 SMI ファイル 7 KB □ C20120123.171620-20120123.17171 2012/01/23 6:35 デキスト ドキュ 1 KB □ C20120123.171620-20120123.17171 2012/01/23 6:35 デキスト ドキュ 1 KB □ C20120123.171620-20120123.17171 2012/01/23 6:35 デキスト ドキュ 0 KB ■ C20120123.171620-20120123.17171 2012/01/23 6:35 デキスト ドキュ 0 KB
	<text></text>
	5 Windows メディアプレーヤーを終了する場合は右上の ×ボタンを押してください。

バックアップしたものを再生する